

BOOT LOOP INSTRUCTIONS

Step 1. Remove the cover from the back of your device and unplug the power cord.

Step 2. Plug the power cord in again, then hold Enter and 7 together to display the password entry screen.

Step 3. Key in the password: Press 1, Alpha, Alpha, 6, 6, 8, 3, 1, and then press the green Enter key.

Note: Asterisks appear on the screen as the password is keyed in. However, pressing the Alpha key does not add an asterisk.

Step 4. Press 1 to select Edit Parameters.

Step 5. Press 1 for Group ID, and then press the green Enter key.

Step 6. Key in the password: Press 1, Alpha, Alpha, 6, 6, 8, 3, 1, and then press the green Enter key.

Step 7. The Terminal Mgr Edit G1 CONNFIG.SYS displays, press the green Enter key.

Step 8. Add the parameter *DHEAP:

Press 1 to select New.

Press * and then an * displays.

Press 3, Alpha and then *D displays.

Press 4, Alpha, Alpha and then *DH displays.

Press 3, Alpha, Alpha and then *DHE displays.

Press 2, Alpha and then *DHEA displays.

Press 7, Alpha and then *DHEAP displays.

Press the green Enter key.

Step 9. Press 0 for the value, and then press the green Enter key to save the new parameter.

Step 10. Add the parameter #CZE:

Press 1 to select New.

Press # and then an # displays.

Press 2, Alpha, Alpha, Alpha and then #C displays.

Press 1, Alpha, Alpha and then #CZ displays.

Press 3, Alpha, Alpha and then #CZE displays.


Press the green Enter key.

Step 11. Press 1 for the value, and then press the green Enter key to save the new parameter.

Step 12. Press the red Cancel key.

Step 13. Press 3 to select Restart.

The terminal will power cycle and then display the application menu. For example:

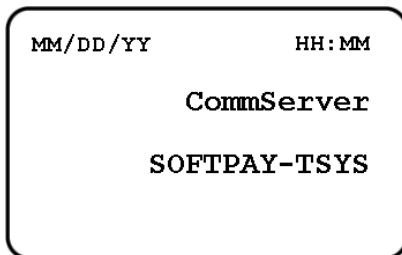

Next step: To prevent the reboot issue from recurring, follow the **Software Update Instructions**

Call 800.487.5577 or visit finet.net

